



# Arta DWS / QL DWS



Profile finish:

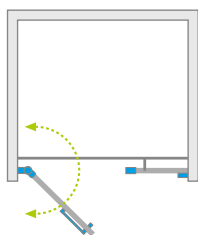

03 Chrome+



Arta DWS + shower board





Shower enclosure set consists of 2 parts: shower door and front wall. Please specify all the article numbers when making an order. For the QL DWS model, use the configurator ([www.konfigurator.radaway.eu](http://www.konfigurator.radaway.eu)) or fill in the order form for a non-standard product.

Model	Width of niche (X)	Height (H)	Element	TRANSPARENT GLASS
				Art. No.
DWS 100 L	992-1008	2000	Door W 628 L	386628-03-01L
			DWS front wall 315 L	386091-03-01L
DWS 100 R	992-1008	2000	Door W 628 R	386628-03-01R
			DWS front wall 315 R	386091-03-01R
DWS 110 L	1092-1108	2000	Door W 628 L	386628-03-01L
			DWS front wall 415 L	386092-03-01L
DWS 110 R	1092-1108	2000	Door W 628 R	386628-03-01R
			DWS front wall 415 R	386092-03-01R
DWS 120 L	1192-1208	2000	Door W 828 L	386828-03-01L
			DWS front wall 315 L	386091-03-01L
DWS 120 R	1192-1208	2000	Door W 828 R	386828-03-01R
			DWS front wall 315 R	386091-03-01R
DWS 130 L	1292-1308	2000	Door W 828 L	386828-03-01L
			DWS front wall 415 L	386092-03-01L
DWS 130 R	1292-1308	2000	Door W 828 R	386828-03-01R
			DWS front wall 415 R	386092-03-01R
DWS 140 L	1392-1408	2000	Door W 828 L	386828-03-01L
			DWS front wall 515 L	386095-03-01L
DWS 140 R	1392-1408	2000	Door W 828 R	386828-03-01R
			DWS front wall 515 R	386095-03-01R
QL DWS 70-150 L	700-1500	2000	Door L	10102504-03-01L
			Front wall	10102506-03-01
QL DWS 70-150 R	700-1500	2000	Door R	10102504-03-01R
			Front wall	10102506-03-01
QL DWS 150-200 L	1501-2000	2000	Door L	10102505-03-01L
			Front wall	10102506-03-01
QL DWS 150-200 R	1501-2000	2000	Door R	10102505-03-01R
			Front wall	10102506-03-01

■ – available only in the “Made to Measure” programme. Please specify the product dimension.

# TECHNICAL DRAWINGS

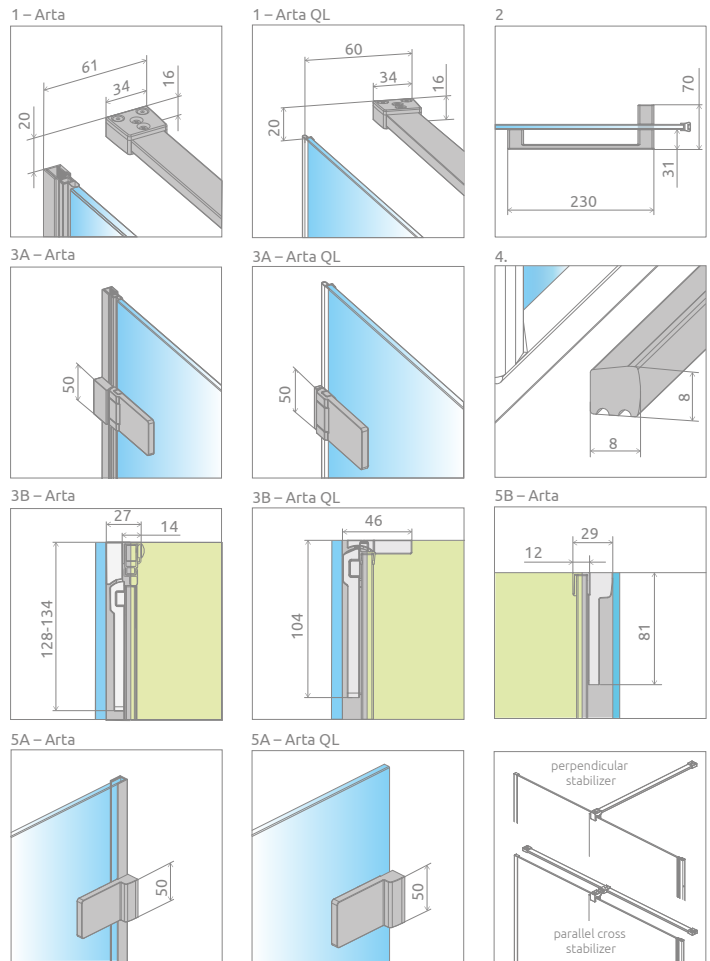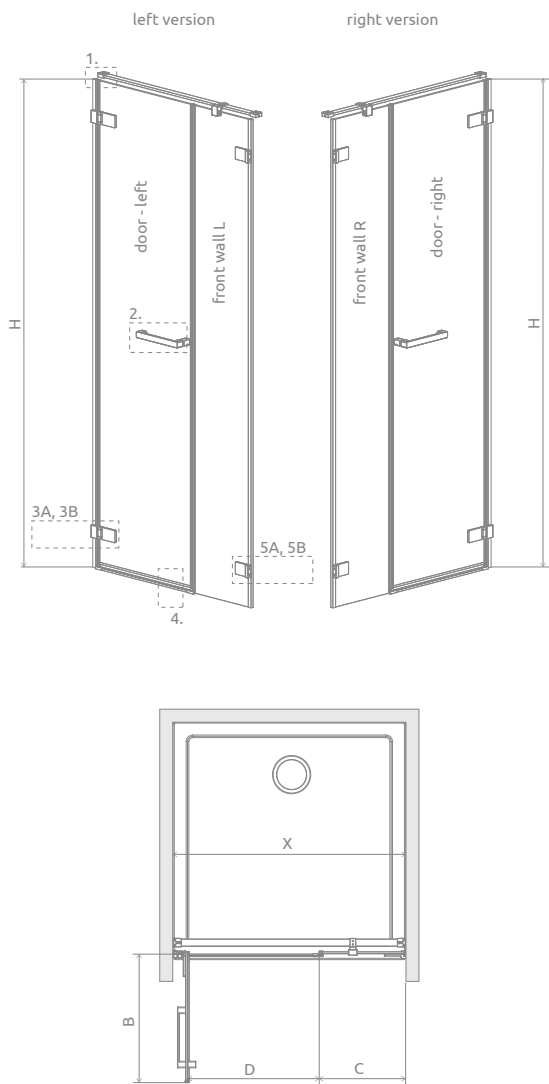

If the width of the front of the cabin (X) is ≤ 1600, we can use two types of stabilization – perpendicular or parallel (delivered as standard). This option should be clearly marked in the order.

Model	X	B	C	D	H
DWS 100*	992-1008	614	325-335	617	2000
DWS 110*	1092-1108	614	425-435	617	2000
DWS 120*	1192-1208	814	325-335	817	2000
DWS 130	1292-1308	814	425-435	817	2000
DWS 140	1392-1408	814	525-535	817	2000

For the Arta QL shower enclosure, dimensions according to the configurator.

## ADDITIONAL OPTIONS

Arta

MADE TO MEASURE  
p. 5

GLASS VARIANTS  
p. 9

PRINT/ENGRAVING ON GLASS  
p. 22/26


INSIDE BRACKETS  
p. 15

STABILIZER L  
p. 11

MAXIMUM HEIGHT  
p. 15



## RECOMMENDED SHOWER TRAYS

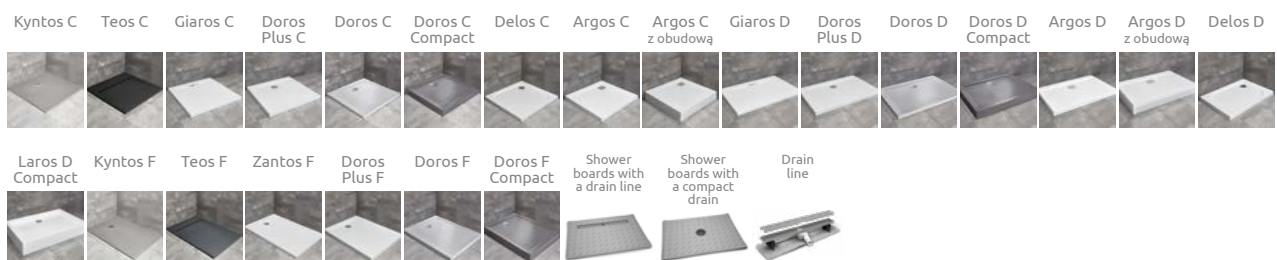

Dimensions are given in mm.